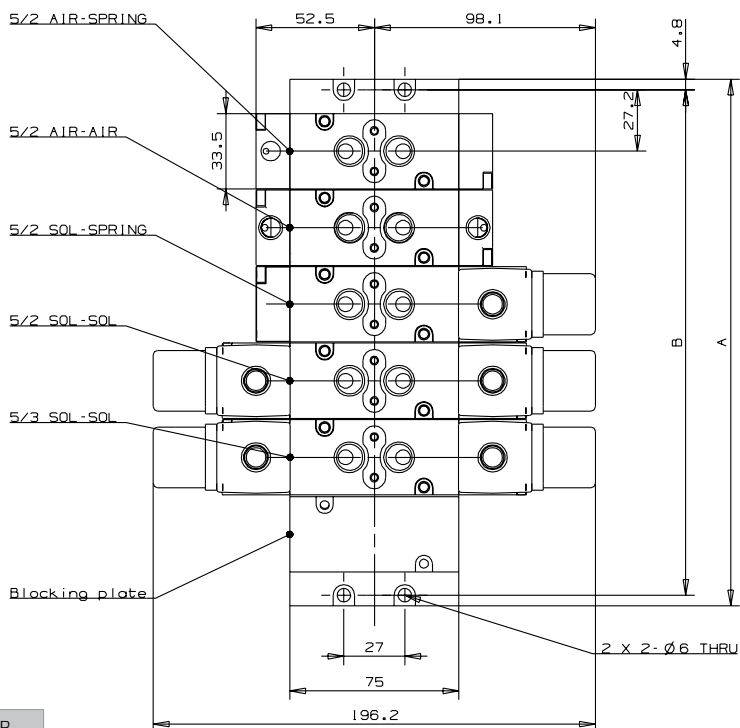 
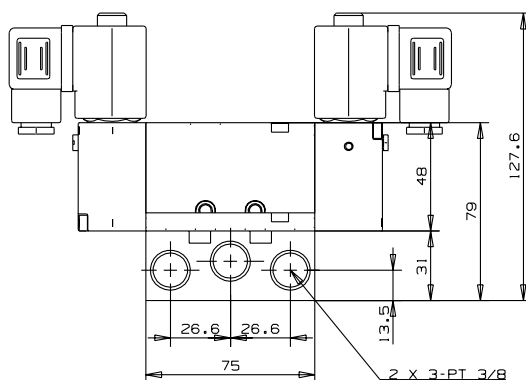 


BC | Manifold

BC-BP | Manifold



How to Order

BC	-	BP	-	No. OF STATIONS
				2
				3
				4
				6

No. of stations	A (mm)	B (mm)
2	128	118.5
3	162	152.5
4	196	186.5
6	264	254.5

PNEUMATIC VALVES | General Purpose

 
 
 
 
 
 
 
 
 
BC Series | 1/4" Body Ported Valves

BC | Manifold

Manifold Specification Sheet

Manifold Model : BC-BP-□

Mark required stations with an "x"

VALVE DESCRIPTION	* STATIONS					
	1	2	3	4	5	6
Air-Spring 						
Air-Dif 						
Air-Air 						
Air-Air 3 Position Closed Center 						
Air-Air 3 Position Exhaust Center 						
Air-Air 3 Position Pressure Center 						
Sol-Spring 						
Sol-Dif 						
Sol - Sol 						
Sol - Sol 3 Position Closed Center 						
Sol-Sol 3 Position Exhaust Center 						
Sol-Sol 3 Position Pressure Center 						
Sol-Sol 3 Position Shelf Control 						

* Station No.1 starts from the left side of the manifold